Ramvac

INSTALLATION INSTRUCTIONS

S-TYPE EXHAUST FILTER (200 CFM WITHOUT CHECK VALVE)

S-TYPE EXHAUST FILTER ASSEMBLY (PART NO. 003270)

Normal Location: Mount the filter as shown *(FIG 1)*.

Remote Location: Contact Ramvac technical support at 866-DTE-INFO for assistance.

NOTICE Minimum 29.0" overhead clearance for maintenance (measure from top of Bulldog/ Bison 3/5/7/9 or Aeras RV4/RV5/RV7/RV10 oil reservoir).

NOTICE This is not a bacteria filter. Exhaust must be vented outside. See your Vacuum Unit Installation/User Manual.

PRODUCT DIMENSIONS - PLUMB WITH 2"PIPE

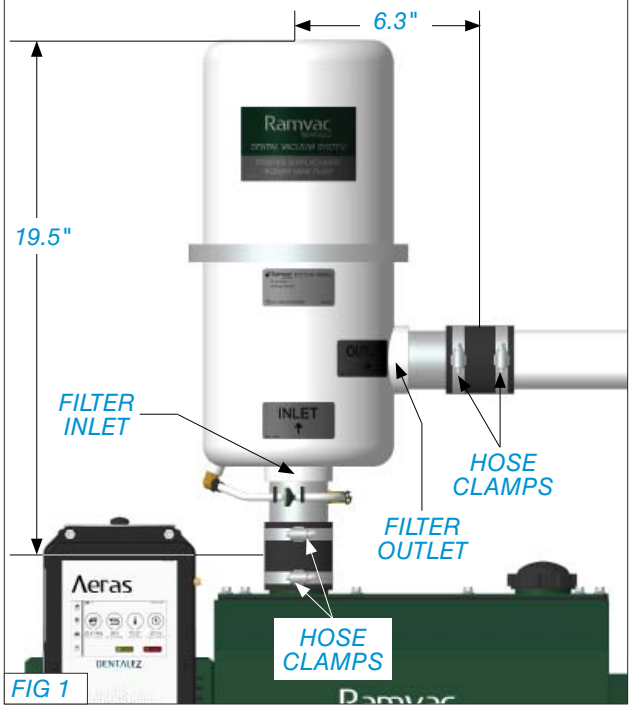

FIG 1

REMOVAL/INSTALLATION

1. Remove existing exhaust pipe from vacuum unit.
2. Connect filter inlet to the power unit as shown *(FIG 1)*.
3. Secure hose clamps to avoid an oil leak.
4. Connect filter outlet to the existing exhaust line as shown *(FIG 1)*.
5. Secure hose clamps to avoid an oil leak.
6. Support the exhaust pipe leaving the filter.
7. Place a non-rigid hanger within 12" of the filter outlet.
8. Cycle unit to test filter for proper function.