Forest DENTALEZ

HANDS-FREE HVE

STEP 1: Snap HVE nozzle into cradle (FIG. 1).

STEP 2: Flexible assistant's arm will drape behind chair (FIG. 2).

STEP 3: Turn tension screw right to tighten and left to loosen (Fig. 3).

⚠ *WARNING: Tension screw should face away from patient.*

⚠ *WARNING: Refer to Forest™ Operatory Equipment Asepsis and HVE/SE Reprocessing and Maintenance Operator's Guide for infection control procedures.*

⚠ *CAUTION: HVE should not be resting in cradle while patient is being positioned for treatment or exiting chair.*

FIG. 1:

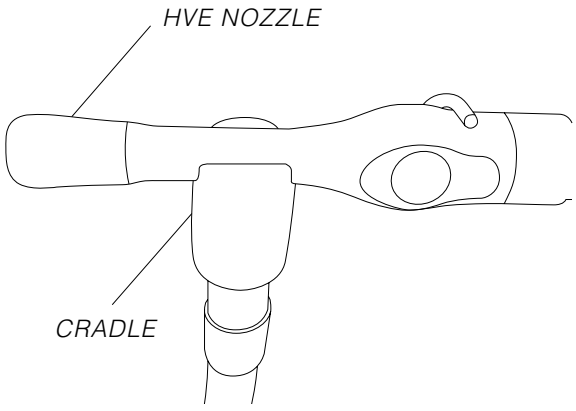

FIG. 2:

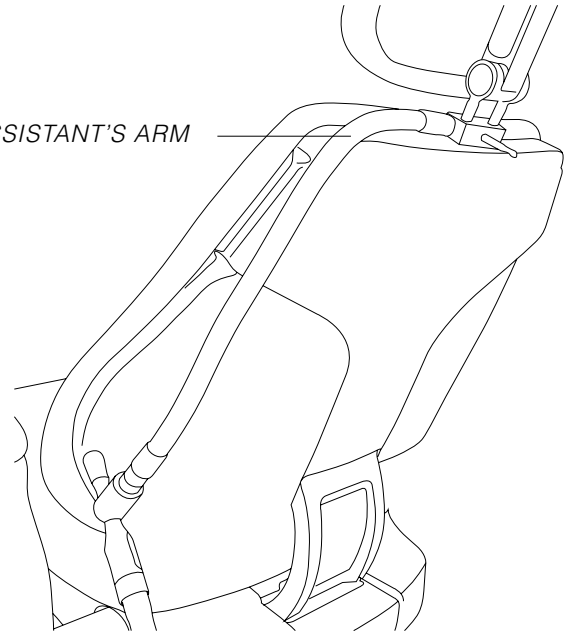

FIG. 3:

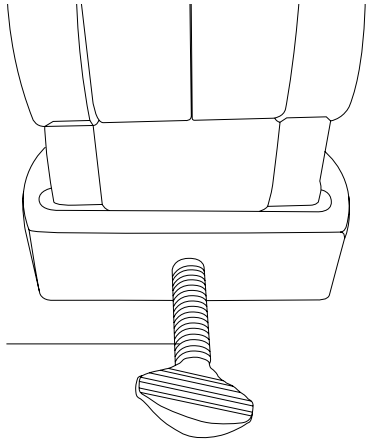

DTE OREGON, INC. *DENTALEZ.COM*

6200 NE Cherry Drive, Hillsboro, OR 97124 USA (TF) 800 . 423 . 3555 (T) 503 . 640 . 3012 (F) 503 . 693 . 9715

CE 0459

11.8.21 0097-064 Rev. A